




Part # 1007901, 1007902, 1007903  
 Canopy Extension Frame 25ft, 27ft, 29ft

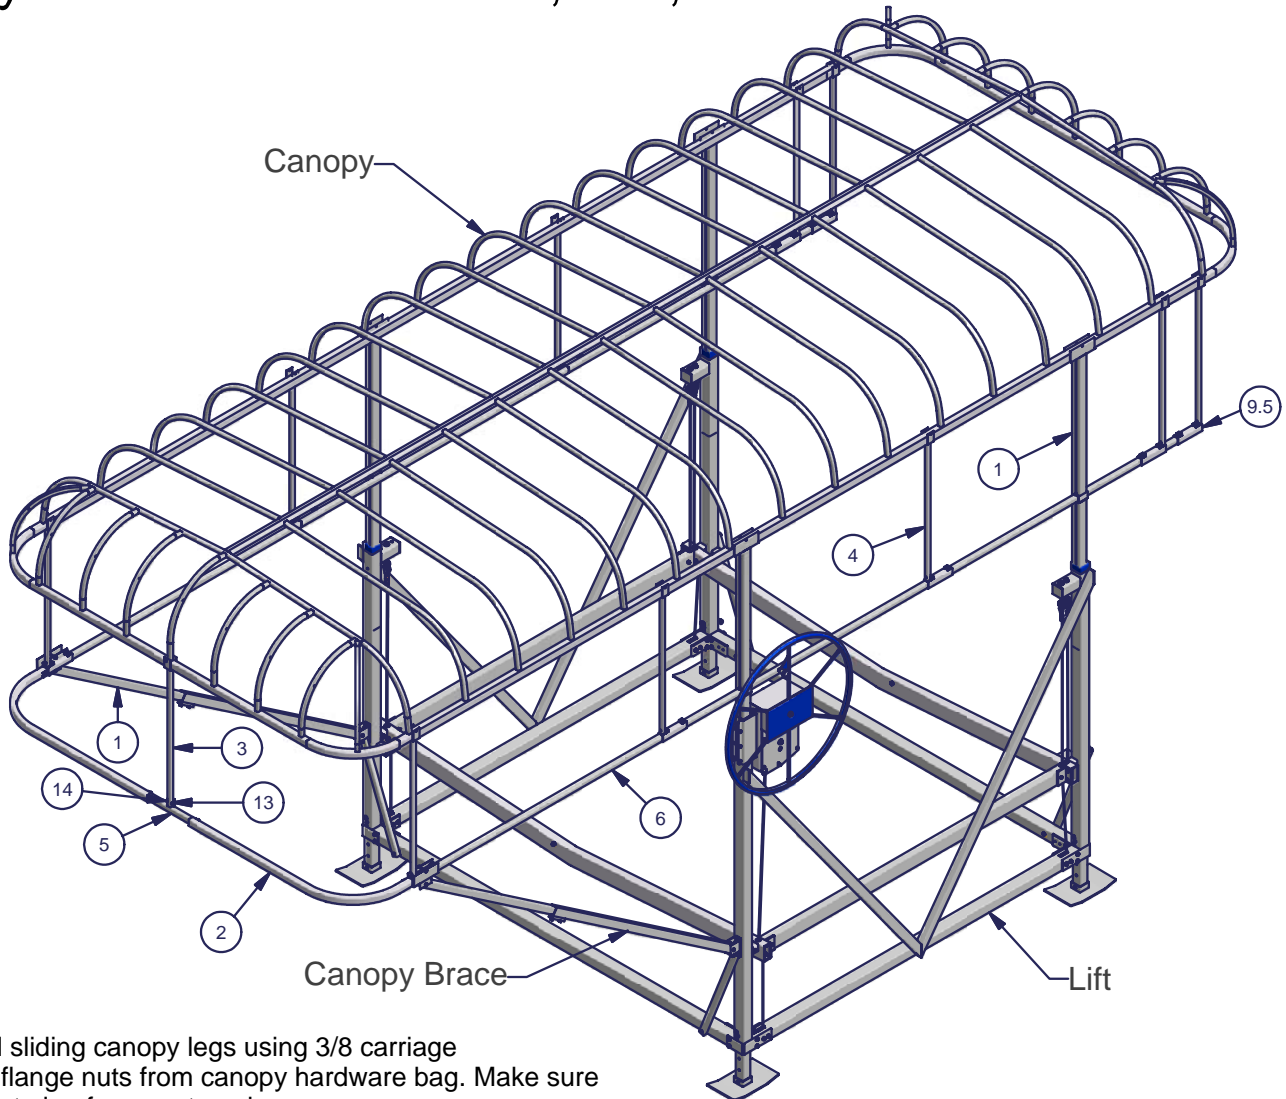

- Step 1. Install sliding canopy legs using 3/8 carriage bolts and 3/8 flange nuts from canopy hardware bag. Make sure tube welded into leg faces outward.
- Step 2. Assemble canopy according to canopy instructions and attach to canopy legs in desired position.
- Step 3. Attach canopy extension supports (side and end) as shown using 5/16 x 2-1/2 carriage bolts and 5/16 nuts, leave loose.
- Step 4. Slide bottom tubes into side support tubes and canopy legs and secure with 3/8 x 1 bolts and 3/8 square nut. Note: Position second, side support at the rear of the lift about 1' in front of the other, this will be used to attach the fabric.
- Step 5. Attach canopy extension end horizontal support to canopy extension end support using 3/8 x 1-1/2 bolt and 3/8 flange nut.
- Step 6. Attach canopy extension bent end using 3/8 x 1 bolts and 3/8 square nuts. Align with canopy.
- Step 7. Tighten all hardware.
- Step 8. Insert plastic push-in caps into exposed tubes at rear of lift.
- Step 9. Attach fabric, start at front of lift with velcro end of fabric centered at front of lift by support tube. Attach bottom of fabric to lower tubes using velcro on fabric.
- Step 10. Attach top of fabric to canopy using bungee cords attach to same canopy angle as canopy fabric attaches too.
- Step 11. Wrap end of canopy extension fabric around back of lift and attach to second support bracket using bungee cords.
- Step 12. Attach canopy brace.

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	4	1013125	Weldment Canopy Extension Sliding Canopy Leg x 84
2	2	1013116	Weldment Canopy Extension Bent End
3	1	1013122	Weldment Canopy Extension End Support
4	10	1013117	Weldment Canopy Extension Side Support
5	1	1013172	Weldment Canopy Extension End Horizontal Support
6	6	1013129	Prt Alum Tube 1.125 X 1.625 X .125 x 88.50 (25 ft)
6	6	1013131	Prt Alum Tube 1.125 X 1.625 X .125 x 96.50 (27 ft)
6	6	1013132	Prt Alum Tube 1.125 X 1.625 X .125 x 104.50 (29 ft)
7	1	1013128	Hardware Bolt Bag Canopy Extension
8	24	1002598	Nut Square 3/8 - 16 SS
9	24	1002419	Bolt 3/8 - 16 X 1 SS
10	11	1001970	Bolt Carriage 5/16 x 2-1/2 S.S.
11	11	1001807	Nut 5/16 - 18 Brass
12	2	1000986	Plastic Push-In Cap
13	1	1002420	Bolt 3/8 - 16 - 1.5 SS
14	1	1001802	3/8" Flange Nut Brass