


SHOREMASTER

FULL-LENGTH GUIDE ONS FOR VERTICAL AND CANTILEVER LIFTS

1. Bolt the Full-Length Guide Pockets (3&4) to the Front & Rear Rack Beams as shown using (two) 3/8" x 3" Machine Bolts & (two) 3/8" Brass Hex Nuts (four places).
2. Bolt the Full-Length Guide On Legs (5) to the Full-Length Guide-Ons (6) as shown using (four) 3/8" x 3" Machine Bolts & (four) 3/8" Brass Hex Nuts (on non-slotted hole), then use (four) 3/8" x 3" Machine Bolt, (four) 3/8" Nylock Brass Nut and (eight) 3/8" Flat Washer (on slotted holes). Leave bolts loose.
3. Insert the Full-Length Guide Legs (5) into the Full-Length Guide Pockets (3&4) at desired height and secure with (two) 1/2" X 1-1/2" Set Screws & (two) 1/2" Square Nuts (4 places)
4. Adjust Full-Length Guide Ons (6) to desired angle and secure previously installed bolts.

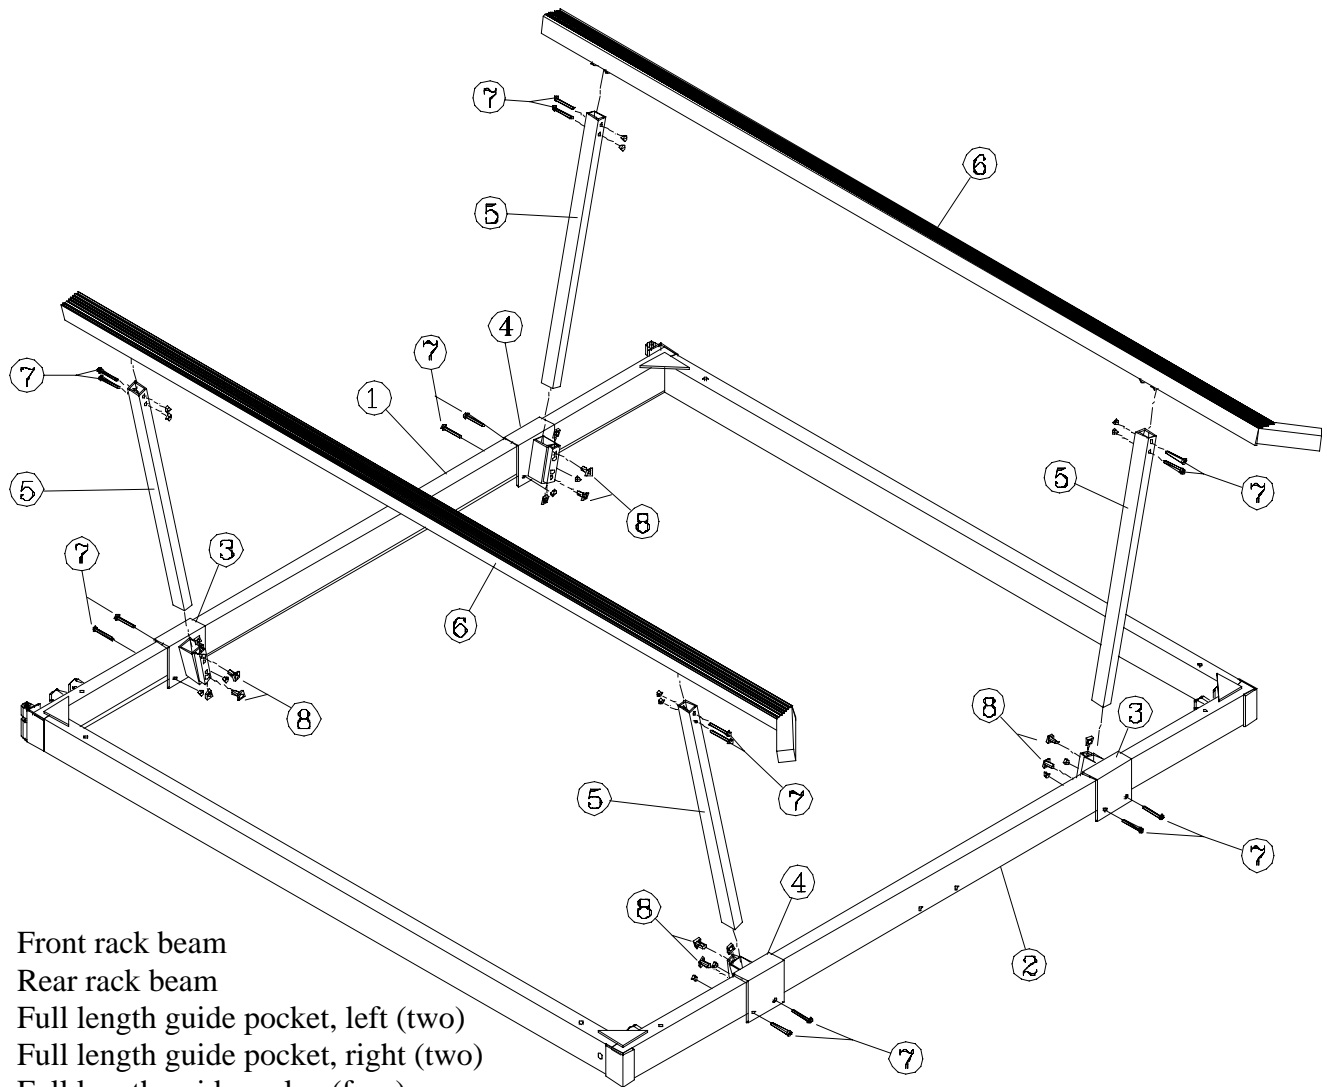

1. Front rack beam
2. Rear rack beam
3. Full length guide pocket, left (two)
4. Full length guide pocket, right (two)
5. Full length guide on leg (four)
6. Full length guide on, (two)
7. (one) 3/8" x 3" machine bolt, (one) 3/8" hex nut (on non-slotted holes) or (one) 3/8" nylock hex nut and (two) 3/8" flat washer (on slotted holes) (sixteen places)
8. (one) 1/2" x 1-1/4" set screw, (one) 1/2" square nut (eight places)

www.shoremaster.com – email: quality1@shoremaster.com

1 ShoreMaster Drive - Industrial Park • P.O. Box 358 • Fergus Falls, Minnesota 56538-0358

Phone: (218) 739-4641 • WATS: 1-800-328-8945 • FAX: (218) 739-4008