




## ADJUSTABLE CRADLES

1. Bolt the blue cradle rubber onto the cradle channel as shown using (six) 5/16" x 1" carriage bolts and (six) 5/16" hex nuts (two places).
2. Bolt cradle leg to cradle channel using (one) 3/8" x 3-1/2" hex bolt and (one) 3/8" hex nut (two places). **Leave bolts loose.**
3. Slide the adjustable cradle pocket over the rack beam and bolt in place at desired location using (two) 3/8" x 3" hex bolts and (two) 3/8" hex nuts (two places).
4. Lower the leg into the adjustable cradle pocket and bolt in place at the desired height using (one) 3/8" x 2-1/4" hex bolt and (one) 3/8" hex nut (two places).
5. Adjust the cradle channel to the desired angle and tighten previously installed bolts securely.

**\*\*CAUTION\*\***

Always tighten the cradle channel so it will not swivel freely.

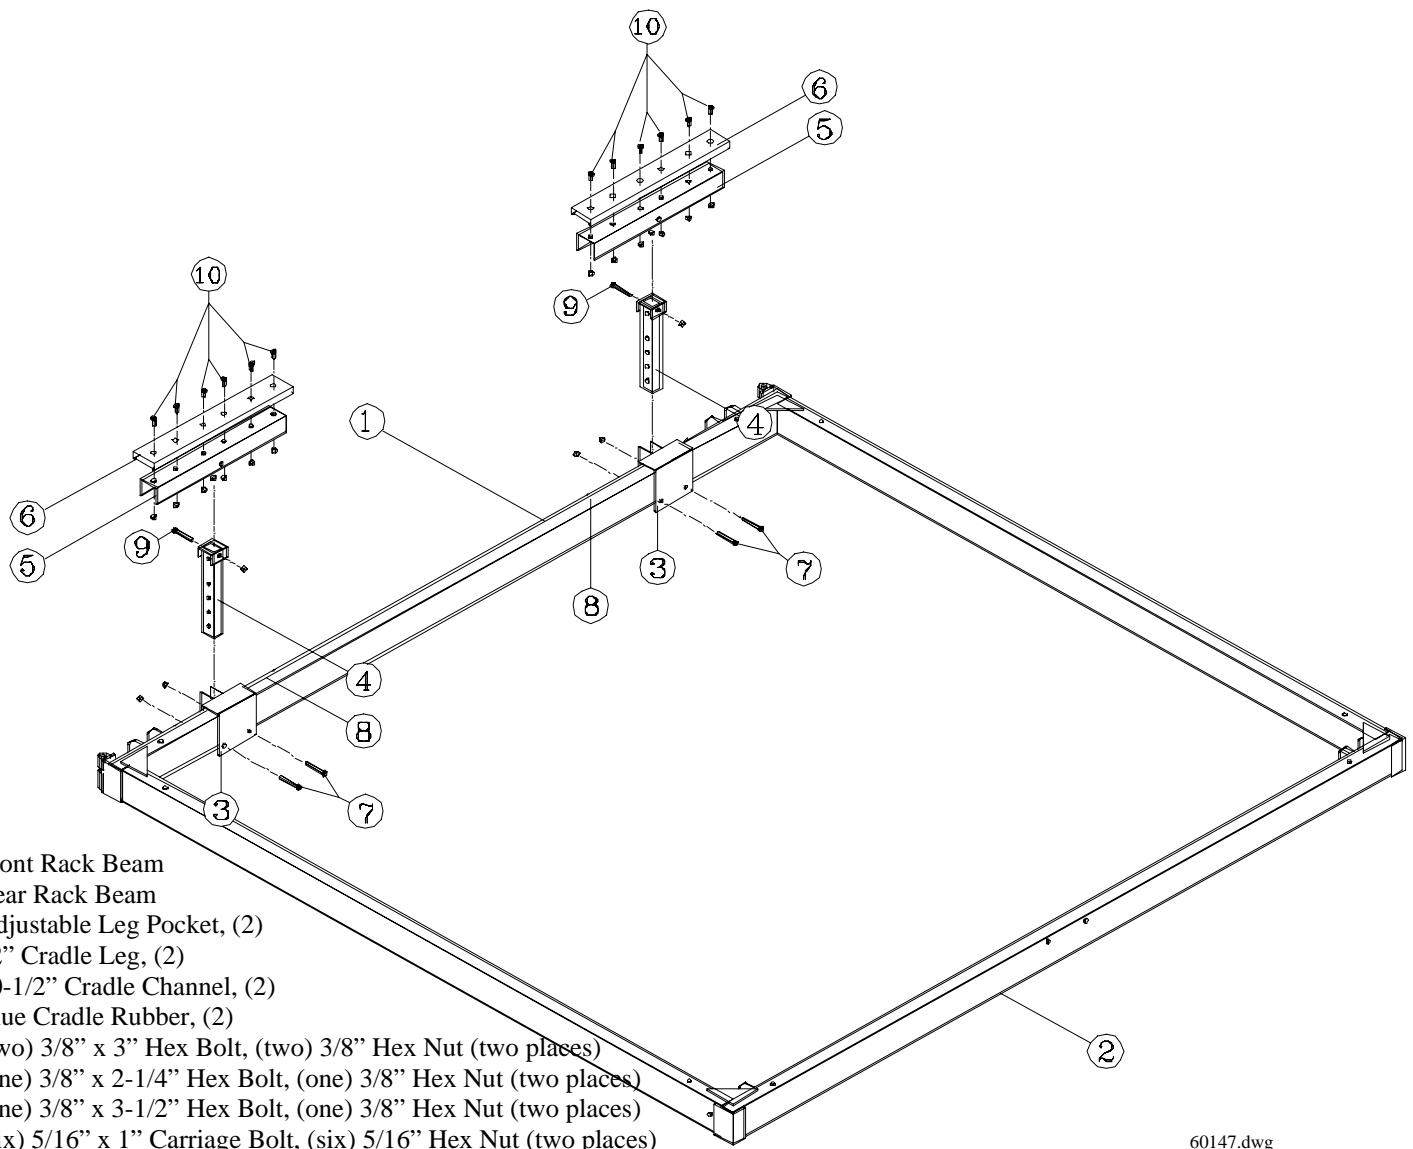

1. Front Rack Beam
2. Rear Rack Beam
3. Adjustable Leg Pocket, (2)
4. 12" Cradle Leg, (2)
5. 20-1/2" Cradle Channel, (2)
6. Blue Cradle Rubber, (2)
7. (two) 3/8" x 3" Hex Bolt, (two) 3/8" Hex Nut (two places)
8. (one) 3/8" x 2-1/4" Hex Bolt, (one) 3/8" Hex Nut (two places)
9. (one) 3/8" x 3-1/2" Hex Bolt, (one) 3/8" Hex Nut (two places)
10. (six) 5/16" x 1" Carriage Bolt, (six) 5/16" Hex Nut (two places)

60147.dwg